


**QVESARUM**


Mini Green House

Mini Green House Prefabricated Mahogany

Size L : 1500mm x W : 600mm X H : 1700mm


(Finish : Oiled)

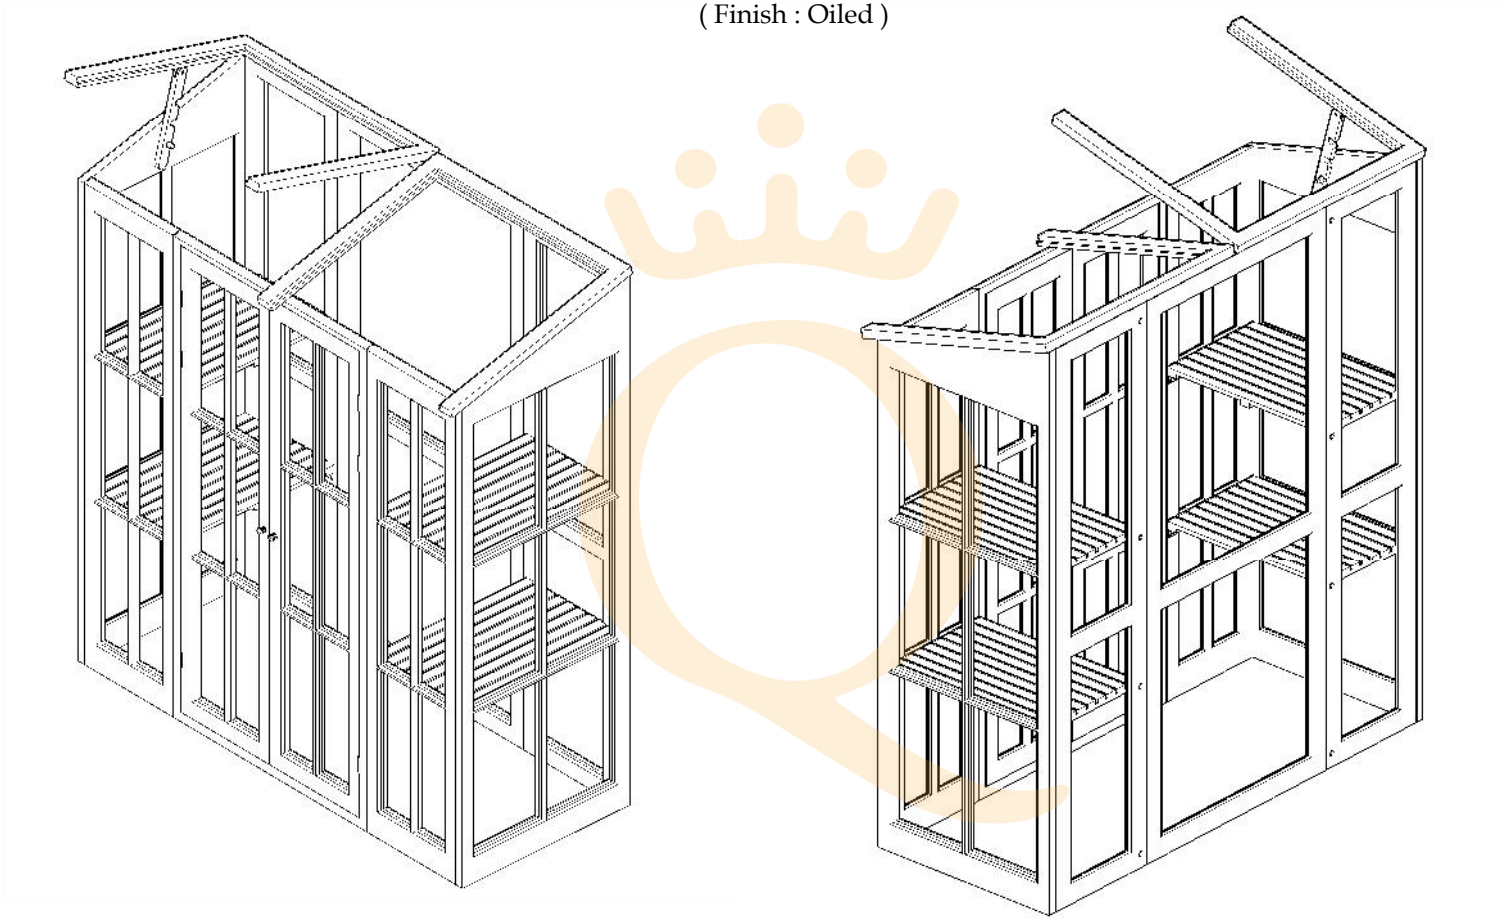

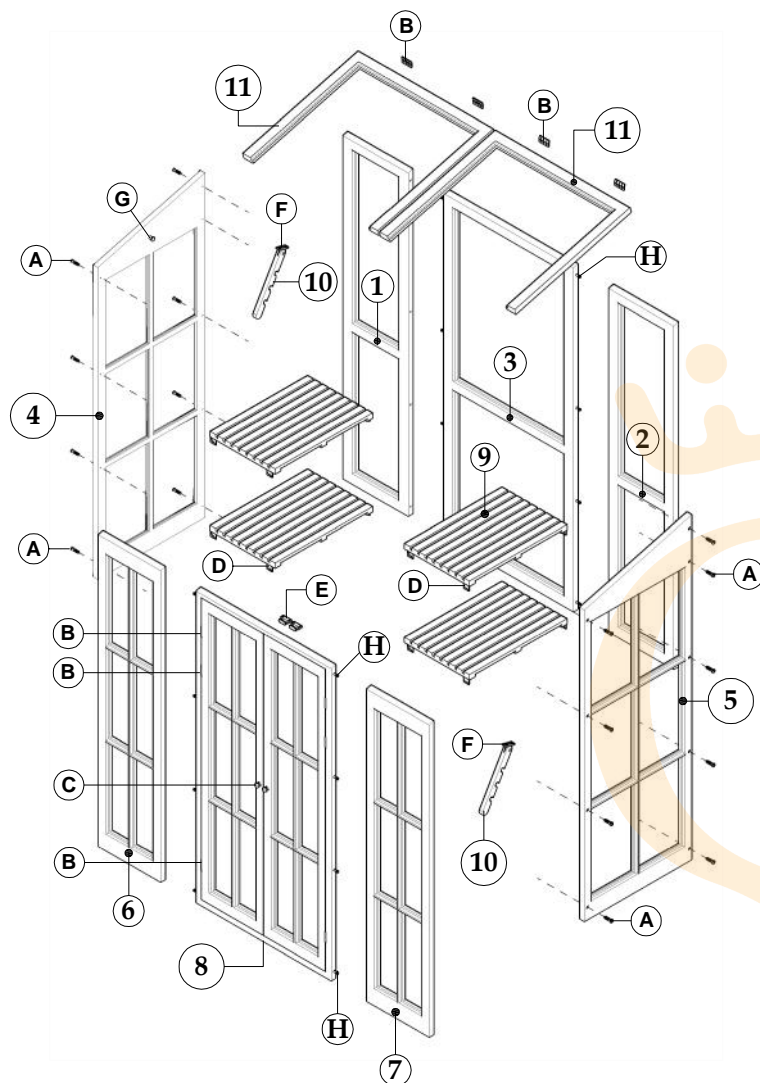


No	Component	Qty
1	Left Back View	1
2	Right Back View	1
3	Middle Back View	1
4	Left Side View	1
5	Right Side View	1
6	Left Front View	1
7	Right Front View	1
8	Doors	2
9	Shelves	4
10	Slide	2
11	Top Window	2

No	Fixing	Qty
A	Bolt 6,0 x 40 mm	18
B	Hinges 2 Inch	10
C	Door Knob	2
D	Corner Brace	16
E	Magnet	2
F	Fitting on Slide	2
G	Fitting on Left and Right side	2
H	Cam Lock	16

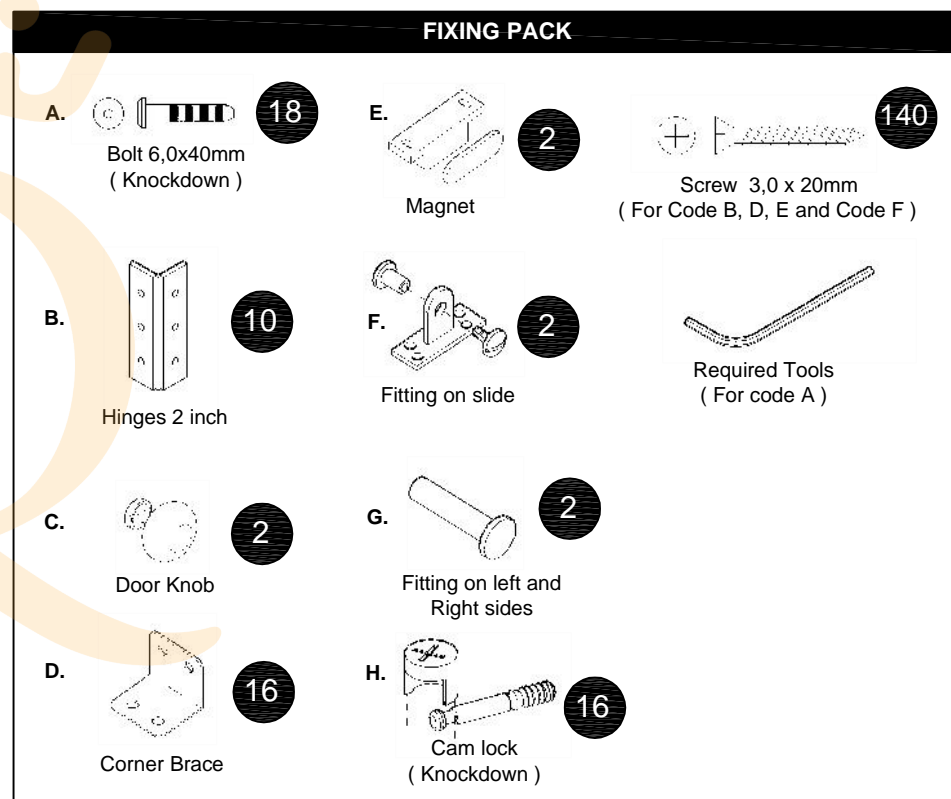


ASSEMBLY INSTRUCTIONS FOR MINI GREEN HOUSE

Step 1

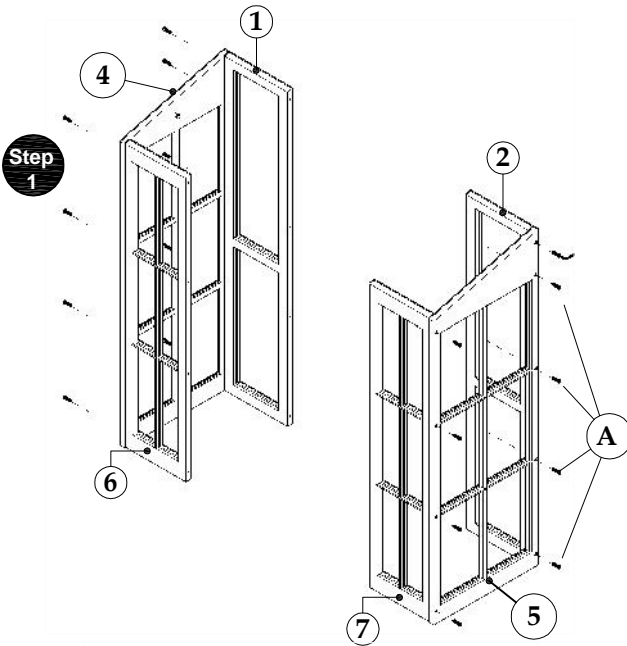

STEP 1

Fix the left and right hand side panels to the back panel as shown using bolt 6,0x40mm for each, screwing through the back panel frame work into the side panel.

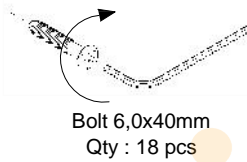


Bolt 6,0x40mm
Qty : 18 pcs


STEP 2

Fix the back panel and the cozen door to the panel that is already installed, as shown using cam lock,


Step 3

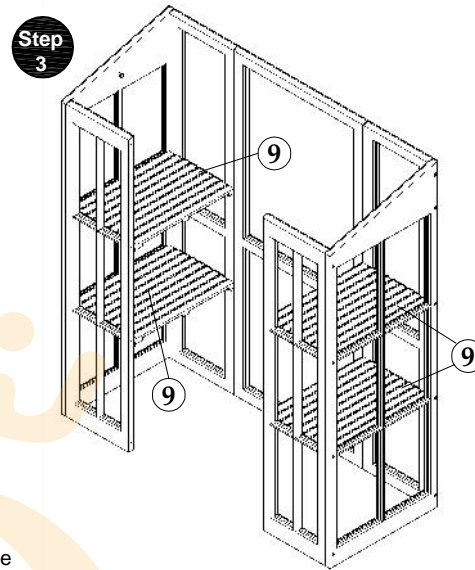

Screw 3,0x20mm
Qty : 64 pcs

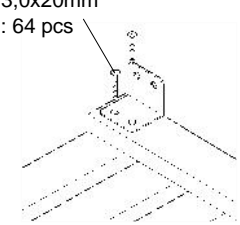


Corner Brace
Qty : 16 pcs

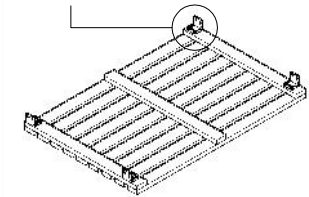

Place four of the corner brace on the underside of each shelf.

Step 2

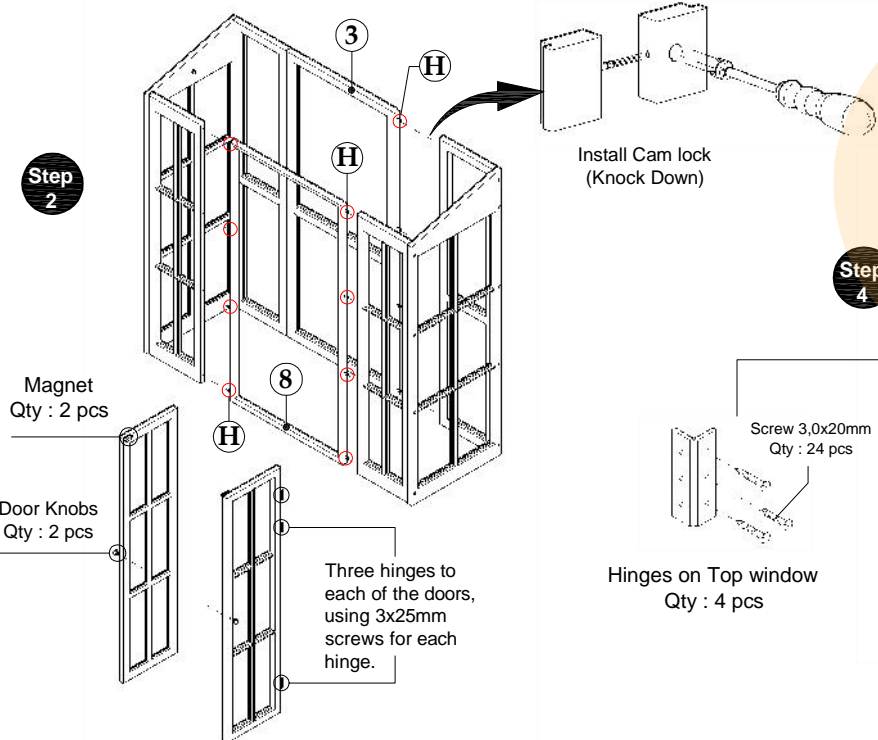

STEP 3

Place the shelf on the right and left side line-up to the laying bars


STEP 4

Place 2 window frames and place 2 hinges on each window

Place fittings on the underside of each window

Install Cam lock
(Knock Down)




Step 4

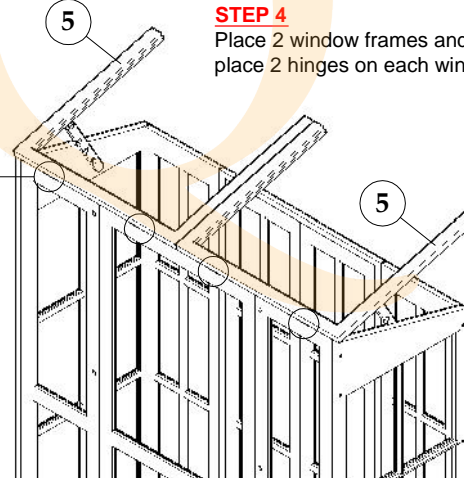

Screw 3,0x20mm
Qty : 24 pcs

Hinges on Top window
Qty : 4 pcs

Screw 3,0x20mm
Qty : 8 pcs

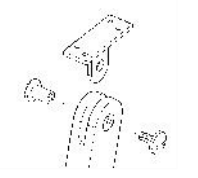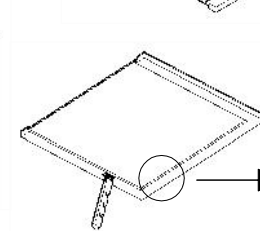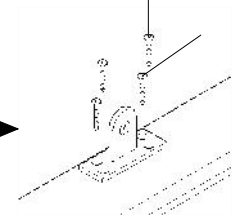

Install both fittings in the slide

Magnet
Qty : 2 pcs

Door Knobs
Qty : 2 pcs

Three hinges to each of the doors, using 3x25mm screws for each hinge.